 
 


6.11 Motor Start Switches for D.C. Power Systems

 
Wiring Diagrams

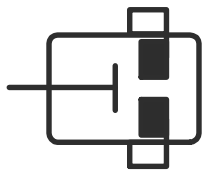


"A"

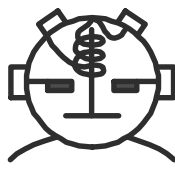

"B"

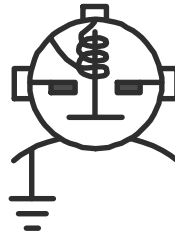

"C"

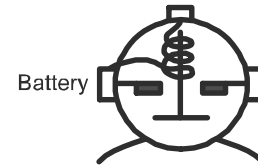 

"D"

Part Number	Voltage	Wiring diagram	Coil Duty	Description
03336	12	D	Int.	Insulated Ground
17757	12	C	Int.	
17744	12	B	Int.	
17764	24	B	Int.	
03322	12/24	A	N.A.	Manual Start Only - M-3301, M-3313
04343	12/24	A	N.A.	Round Valve. Cam Start M-3310 Only
01349	N.A.	N.A.	N.A.	Bus Bar
13155	N.A.	N.A.	N.A.	Bus Bar for use with 17764, 17744 & 17757 Solenoids
01361	N.A.	N.A.	N.A.	Battery Cable, 5" Long
01628	N.A.	N.A.	N.A.	Battery Cable, 6" Long

Switches are available with curved mounting for direct attachment to power unit or with flat base for remote mounting. Other Motor Start Switches are also available. Contact Factory.

Key To Abbreviations: H.D. = Heavy Duty
Int. = Intermittent Duty